

**50E47-843 CROSS REFERENCE DATA / DATOS DE REFERENCIA 50E47-843 /  
DONNÉES DE RÉFÉRENCE 50E47-843**

MODEL / MODELO / MODÈLE	PROGRAM KEY / TECLA DE PROGRAMA / CLÉ DE PROGRAMMATION	JUMPER INSTRUCTIONS / INSTRUCCIONES RELATIVAS PUENTE / INSTRUCTIONS POUR LE CAVALIER	OEM/MANUFACTURER / FABRICANTE / FABRICANT D'ORIGINE
025-25436-000	A (blue / Azul / bleu)	Remove / Retirar / Enlever	York International / White-Rodgers
02525436700	A (blue / Azul / bleu)	Remove / Retirar / Enlever	York International / White-Rodgers
025-25436-700	A (blue / Azul / bleu)	Remove / Retirar / Enlever	York International / White-Rodgers
1001346	Use the appropriate key / Utilice la clave apropiada / Utiliser la clé appropriée	N/A	Carrier Corp. / White-Rodgers
120-08027	C (green / verde / vert)	Remove / Retirar / Enlever	L. B. White Company / White-Rodgers
1300-4928	C (green / verde / vert)	Remove / Retirar / Enlever	Agile Mfg. / White-Rodgers
1380694	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	I.C.P. / White-Rodgers
2076-0184	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Vaillant Corp. / White-Rodgers
350760	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	Thermo Products / White-Rodgers
3591-1306	C (green / verde / vert)	Remove / Retirar / Enlever	Hired Hand Mfg. Inc. / White-Rodgers
50D47-1	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-101	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-120	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-140	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-150	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-160	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-161	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-170	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-20	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-260	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-270	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-40	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-50	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-60	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-70	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-905	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-915	A (blue / Azul / bleu)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-925	E (orange / anaranjada / orange)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-935	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-945	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-955	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-965	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50D47-975	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50E47-1	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-10	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-101	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-110	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-120	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50E47-130	B (red / roja / rouge)	Remove / Retirar / Enlever	White-Rodgers

<b>MODEL / MODELO / MODÈLE</b>	<b>PROGRAM KEY / TECLA DE PROGRAMA / CLÉ DE PROGRAMMATION</b>	<b>JUMPER INSTRUCTIONS / INSTRUCCIONES RELATIVAS PUENTE / INSTRUCTIONS POUR LE CAVALIER</b>	<b>OEM/MANUFACTURER / FABRICANTE / FABRICANT D'ORIGINE</b>
50E47-140	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50E47-150	B (red / roja / rouge)	Remove / Retirar / Enlever	White-Rodgers
50E47-160	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50E47-161	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50E47-170	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50E47-20	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50E47-260	F (yellow / amarilla / jaune)	Remove / Retirar / Enlever	White-Rodgers
50E47-30	D (violet / violeta / violet)	Remove / Retirar / Enlever	White-Rodgers
50E47-40	F (yellow / amarilla / jaune)	Remove / Retirar / Enlever	White-Rodgers
50E47-50	D (violet / violeta / violet)	Remove / Retirar / Enlever	White-Rodgers
50E47-560	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-60	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-70	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-841	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50E47-843	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50E47-851	E (orange / anaranjada / orange)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	White-Rodgers
50E47-860	E (orange / anaranjada / orange)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	White-Rodgers
50E47-861	F (yellow / amarilla / jaune)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	White-Rodgers
50E47-870	B (red / roja / rouge)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	White-Rodgers
50E47-871	D (violet / violeta / violet)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	White-Rodgers
50F47-101	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50F47-140	F (yellow / amarilla / jaune)	Remove / Retirar / Enlever	White-Rodgers
50F47-160	F (yellow / amarilla / jaune)	Remove / Retirar / Enlever	White-Rodgers
50F47-40	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50F47-60	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50G47-1	A (blue / Azul / bleu)	Remove / Retirar / Enlever	White-Rodgers
50G47-130	C (green / verde / vert)	Remove / Retirar / Enlever	White-Rodgers
50G47-140	F (yellow / amarilla / jaune)	Remove / Retirar / Enlever	White-Rodgers
50G47-150	D (violet / violeta / violet)	Remove / Retirar / Enlever	White-Rodgers
50G47-160	F (yellow / amarilla / jaune)	Connect to FP / Conectar a FP / Brancher à FP	White-Rodgers
50G47-40	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
50G47-60	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	White-Rodgers
780-780	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
780-783	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
780-784	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
780-785	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
780-786	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
780-788	B (red / roja / rouge)	Remove / Retirar / Enlever	Robertshaw
780-789	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
780-790	E (orange / anaranjada / orange)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	Robertshaw
780-910	E (orange / anaranjada / orange)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	Robertshaw
832-002	F (yellow / amarilla / jaune)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	Fenwal
832-005	D (violet / violeta / violet)	Connect to FP or Remove / Conectar a FP o Retirar / Brancher à FP ou enlever	Fenwal
995395	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Peerless Heater / White-Rodgers
99796380	C (green / verde / vert)	Remove / Retirar / Enlever	Whirlpool Corp. / White-Rodgers

<b>MODEL / MODELO / MODÈLE</b>	<b>PROGRAM KEY / TECLA DE PROGRAMA / CLÉ DE PROGRAMMATION</b>	<b>JUMPER INSTRUCTIONS / INSTRUCCIONES RELATIVAS PUENTE / INSTRUCTIONS POUR LE CAVALIER</b>	<b>OEM/MANUFACTURER / FABRICANTE / FABRICANT D'ORIGINE</b>
99905232	B (red / roja / rouge)	Remove / Retirar / Enlever	Whirlpool Corp. / White-Rodgers
C6411102	C (green / verde / vert)	Remove / Retirar / Enlever	Goodman Mfg. / White-Rodgers
CNT1316	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Trane / White-Rodgers
CNT1690	D (violet / violeta / violet)	Remove / Retirar / Enlever	Trane / White-Rodgers
CNT1691	B (red / roja / rouge)	Remove / Retirar / Enlever	Trane / White-Rodgers
HS780-17NL-104A	A (blue / Azul / bleu)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NL-106A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NL-108A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NL-304A	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NL-306A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NL-308A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17NR-104A	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-106A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-108A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-304A	B (red / roja / rouge)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-306A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-308A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-17NR-312A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-17PL-106A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17PL-108A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17PL-304A	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17PL-306A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17PL-308A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-17PR-104A	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Robertshaw
HS780-17PR-108A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-17PR-306A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-34NL-106A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NL-108A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NL-304A	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NL-306A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NL-308A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NL-312A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34NR-104A	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Robertshaw
HS780-34NR-106A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-34NR-304A	B (red / roja / rouge)	Remove / Retirar / Enlever	Robertshaw
HS780-34NR-306A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-34NR-308A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-34NR-312A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-34PL-104A	A (blue / Azul / bleu)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PL-106A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PL-108A	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PL-304A	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PL-306A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PL-308A	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Robertshaw
HS780-34PR-106A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-34PR-108A	C (green / verde / vert)	Remove / Retirar / Enlever	Robertshaw
HS780-34PR-304A	B (red / roja / rouge)	Remove / Retirar / Enlever	Robertshaw
HS780-34PR-306A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
HS780-34PR-308A	D (violet / violeta / violet)	Remove / Retirar / Enlever	Robertshaw
S890C1007	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S890D1006	C (green / verde / vert)	Remove / Retirar / Enlever	Honeywell
S890G1003	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S890G1011	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell

MODEL / MODELO / MODÈLE	PROGRAM KEY / TECLA DE PROGRAMA / CLÉ DE PROGRAMMATION	JUMPER INSTRUCTIONS / INSTRUCCIONES RELATIVAS PUENTE / INSTRUCTIONS POUR LE CAVALIER	OEM/MANUFACTURER / FABRICANTE / FABRICANT D'ORIGINE
S890G1029	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S890G1037	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S890H1002	B (red / roja / rouge)	Remove / Retirar / Enlever	Honeywell
S890H1010	D (violet / violeta / violet)	Remove / Retirar / Enlever	Honeywell
S890H1028	D (violet / violeta / violet)	Remove / Retirar / Enlever	Honeywell
S8910U	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S8910U1000	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89C1004	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89C1012	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89C1046	A (blue / Azul / bleu)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89C1079	Use the appropriate key / Utilice la clave apropiada / Utiliser la clé appropriée	N/A	Honeywell
S89C1087	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89C1103	A (blue / Azul / bleu)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89D1002	C (green / verde / vert)	Remove / Retirar / Enlever	Honeywell
S89G1005	B (red / roja / rouge)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89G1013	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89G1021	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89G1047	D (violet / violeta / violet)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
S89H1003	B (red / roja / rouge)	Remove / Retirar / Enlever	Honeywell
S89H1011	D (violet / violeta / violet)	Remove / Retirar / Enlever	Honeywell
S89H1029	D (violet / violeta / violet)	Remove / Retirar / Enlever	Honeywell
S89J1008	C (green / verde / vert)	Connect to FP / Conectar a FP / Brancher à FP	Honeywell
X13130193-04	A (blue / Azul / bleu)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437-01	D (violet / violeta / violet)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437010	D (violet / violeta / violet)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437020	D (violet / violeta / violet)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437-03	B (red / roja / rouge)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437030	B (red / roja / rouge)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437040	B (red / roja / rouge)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437060	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	Trane / White-Rodgers
X13130437080	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	Trane / White-Rodgers
X324601	E (orange / anaranjada / orange)	Remove / Retirar / Enlever	Lennox / White-Rodgers

White-Rodgers is a division  
of Emerson Electric Co.

The Emerson logo is a  
trademark and service mark  
of Emerson Electric Co.

White  
Rodgers™

[www.white-rodgers.com](http://www.white-rodgers.com)  
[www.emersonclimate.com](http://www.emersonclimate.com)



**EMERSON**  
Climate Technologies